

Electric Dehumidifier  
ROSAHL  
Product Specification

Model : RDH-3P1



RYOSAI TECHNICA CO.,LTD.


1. Application  
This specification document is applied to model RDH-3P1 of Electric Dehumidifier "ROSAHL".
2. Outline  
Drawing No. : RB-R30X0022 (Refer to page 4)
3. Specifications
  - 1) Applicable Volume : ~ 0.35 m<sup>3</sup>
  - 2) Input Voltage : 100 / 200V AC (85 ~ 264V AC)  
\*For 100V AC : A power supply cord with 2P plug is equipped as standard  
For 200V AC : A power supply cord with 2 crimping terminals (R1.25-4) are equipped as standard
  - 3) Power Consumption : 3W (at 20 deg C, 60%RH)
  - 4) Dielectric strength : 2000V AC (1 minute)
  - 5) Weight : 0.25kg
  - 6) Operating Temperature : -10 ~ 50 deg C
  - 7) Operating Humidity : 90%RH or less
  - 8) Storage Temperature : -20 ~ 60 deg C
  - 9) Storage Humidity : 90%RH or less
  - 10) RoHS Directive : Less than the legal limit of the ten substances
4. Dehumidifying Performance  
2.9g/day (at 30 deg C, 60%RH) \*at the shipment
5. Life  
The dehumidifying performance will reduce during use. (How much it reduces depends on the operating environment and conditions.)  
By the specifications of the applied product, the permissible level of the degradation of the Dehumidifier changes, therefore the life is defined as half-life of performance.  
  
Half-life of performance : About 4~6 years  
\*Continuously operation at 18 deg C (Annual average temperature in Japan)
6. Indication \* Indicated the following items.
  - 1) Model Name
  - 2) Rated Voltage
  - 3) Fuse Capacity
  - 4) Manufacturing Number
  - 5) Manufacturing Year
7. Delivery Inspection \*Tested the following inspection items.
  - 1) Appearance
  - 2) Power Supply Operation
  - 3) Dehumidifying Performance
  - 4) Indication
  - 5) State of Packaging
8. Packaging Specifications  
ROSAHL are packed in the box to avoid breakage failure while transport.

9. Precautions for Use of ROSAHL

- 1) Confirm the dehumidifying / humidifying surface of a membrane not to get a wrong direction before installation. Attaching ROSAHL by mistake will adversely affect several things in the container.
- 2) Attach ROSAHL in the center of the inner side surface of a container with a gasket.  
(Do not attach it on a top or bottom surface.)
- 3) A container must be an airtightness container. If a container has low airtightness and moisture-permeable material, the results may not be what you expected.
- 4) The water vapor goes through a membrane of ROSAHL. If you switch off a power supply, outside water vapor is returned into a container and the humidity is restored.
- 5) If you use ROSAHL with a gasket that contains an antioxidant, crystal materials may be generated on the surface of a membrane. When you choose a gasket, evaluate it enough.
- 6) Do not use silicon-based sealing materials to improve airtightness of a container.  
(Silicon-based sealing materials generate oxime gas and siloxane gas.  
As a result, the performance of ROSAHL reduces in a short term.)  
Additionally, when using any other sealing materials, ROSAHL must be attached after sealing materials are completely cured. Volatile substances generated during curing affect the performance of ROSAHL.  
[Recommended products] : modified silicon caulk (Konishi Co., Ltd.)
- 7) Do not expose a moisture discharging side of a membrane to water. When using outdoors, be sure to attach a rainproof cover (option parts) or a cover to protect a membrane from water or insects.
- 8) Attach a moisture-permeable sheet to a membrane to protect ROSAHL from much dust or oil mists.  
[Recommended products] : Vent Filter TEMISH S-NTF2131A-S06 (Nitto Denko Corporation)
- 9) Keep the moisture discharging side of a membrane well ventilated.
- 10) Do not use ROSAHL with vapor phase corrosion inhibitor or insect repellent.  
Do not use ROSAHL in a place having high density of organic gas.
- 11) Do not do remodeling. ROSAHL may break down.

[ Precautions in the Use for the Storage Cabinet ]

1. When you use ROSAHL to dehumidify into the storage cabinet, do not store volatile rust preventive or things that organic gas volatilizes. The volatile gas which is released from goods reacted at a membrane's anode and new harmful gas is produced. As a result, not only it causes decrease in performance of the ROSAHL, but also it might adversely affect on goods in the storage cabinet. We cannot guarantee even if harm occurs to the stored valuables under the influence of new produced gas.  
Please evaluate enough when you use ROSAHL for the storage cabinet.
2. The maker who produces and sells storage cabinet equipped with ROSAHL should explain that enough for end users using the storage cabinet.

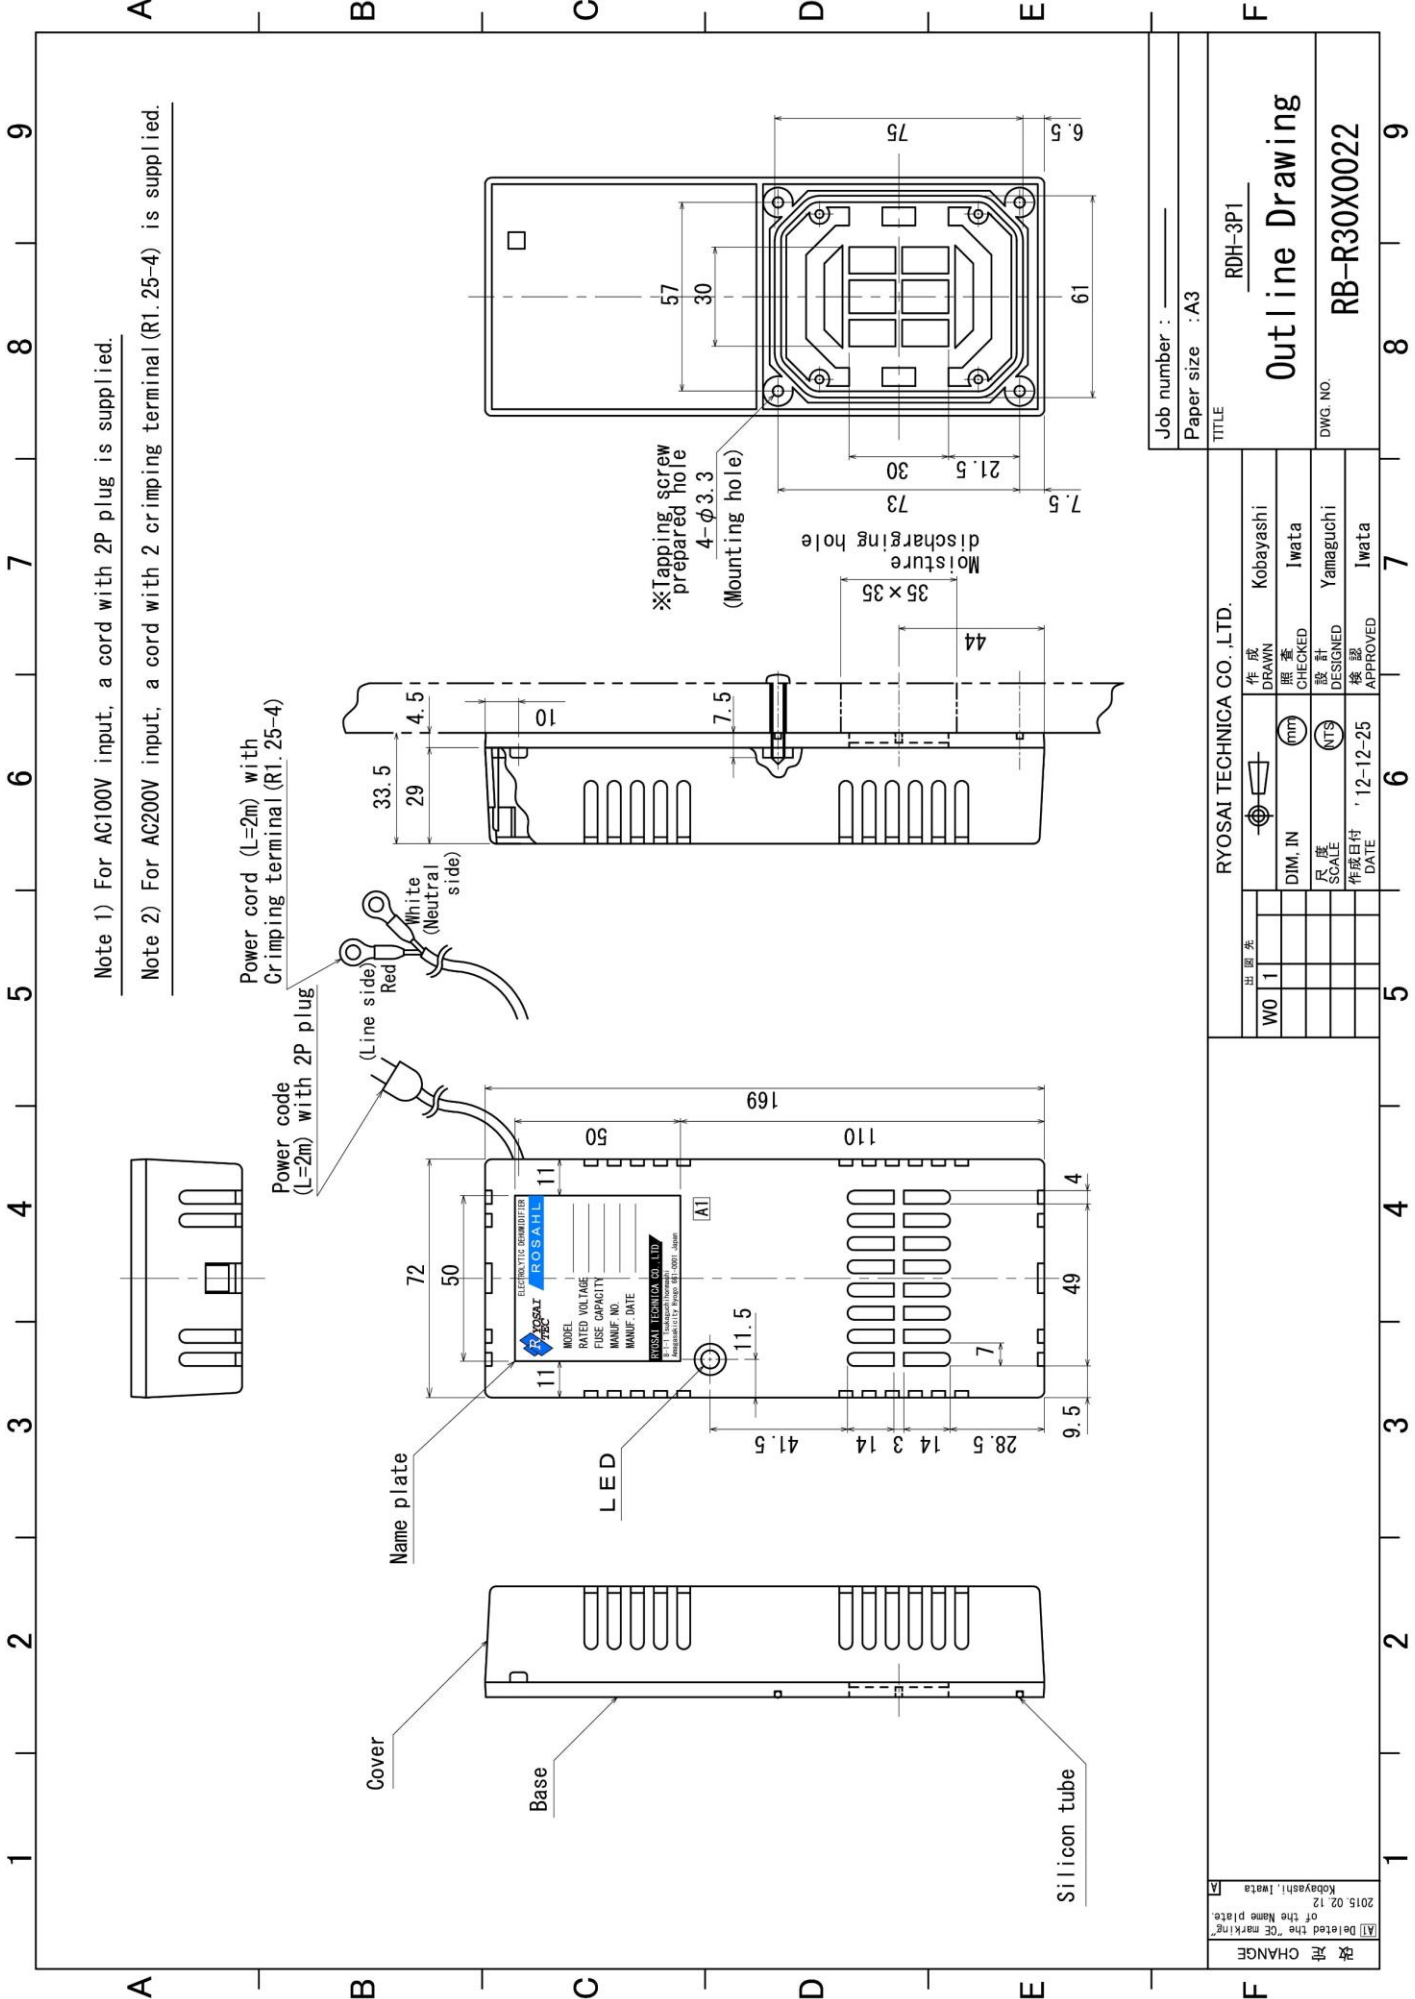

改定 CHANGE  
 [A] Deleted the "OE marking" of the Name plate.  
 2015.02.12  
 Kobayashi, Iwata

出原先		作成		Kobayashi	
WO 1	DIM. IN	DRAWN	照査	CHECKED	Iwata
	尺度	設計	DESIGNED	DESIGNED	Yamaguchi
	作成日付	DATE	12-12-25	APPROVED	Iwata

Job number : \_\_\_\_\_  
 Paper size : A3  
 TITLE RDH-3P1  
**Outline Drawing**  
 DWG. NO. RB-R30X0022